



The diagram illustrates the installation process for the Bosch dishwasher. It includes four numbered steps: 1. Preparing the cutout in the countertop. 2. Inserting the top panel. 3. Connecting the water supply and drain hoses. 4. Connecting the power cord. Dimensions shown are 815 mm height, 570 mm width, 600 mm depth, and 100x50 mm cutout size.

***) Mat.-Nr. 10011641**


verspannen
spænd
spänna
spenn fast
tasapainota

0 - 60 mm



SW 10

SW 13

6

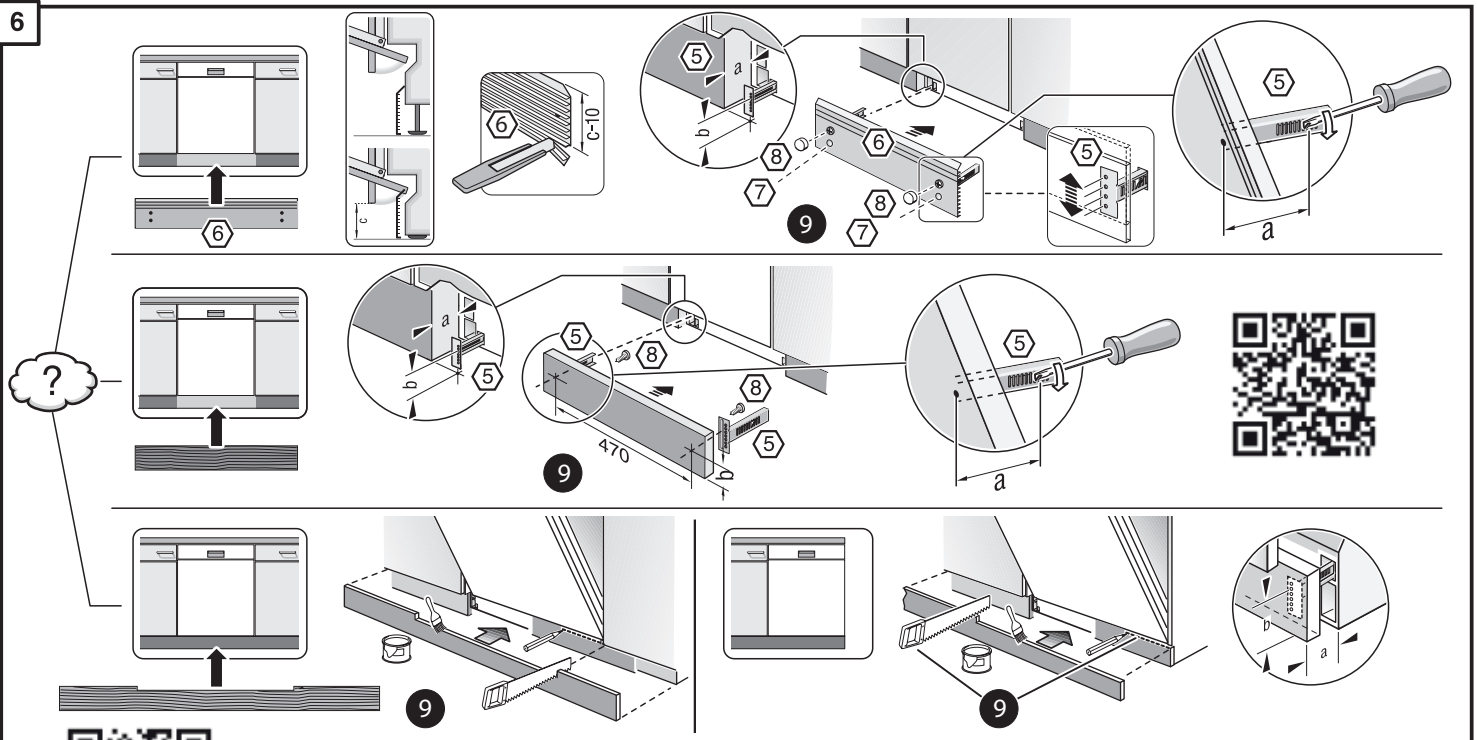

7

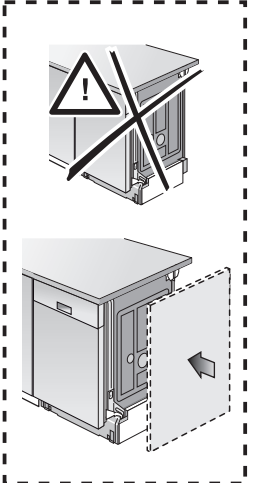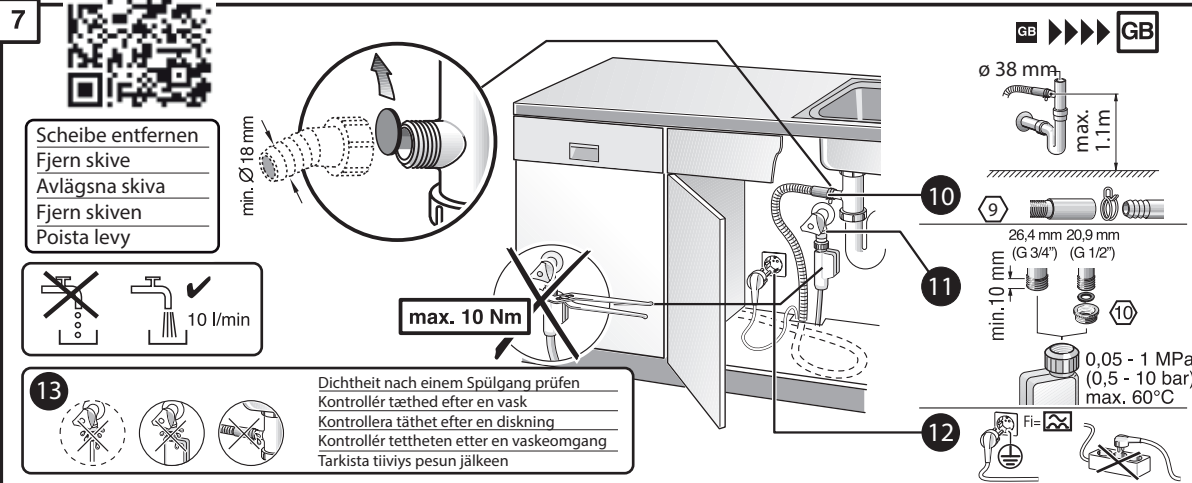

GB

