




Electrolux



electrolux.com/register

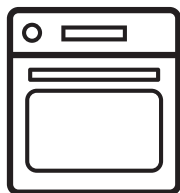

COB402V
EOK5B0B1
EOK5B0V1



EN User Manual | **Oven**
IS Notendaleiðbeiningar | **Ofn**

3

18



INSTALLATION / UPPSETNING

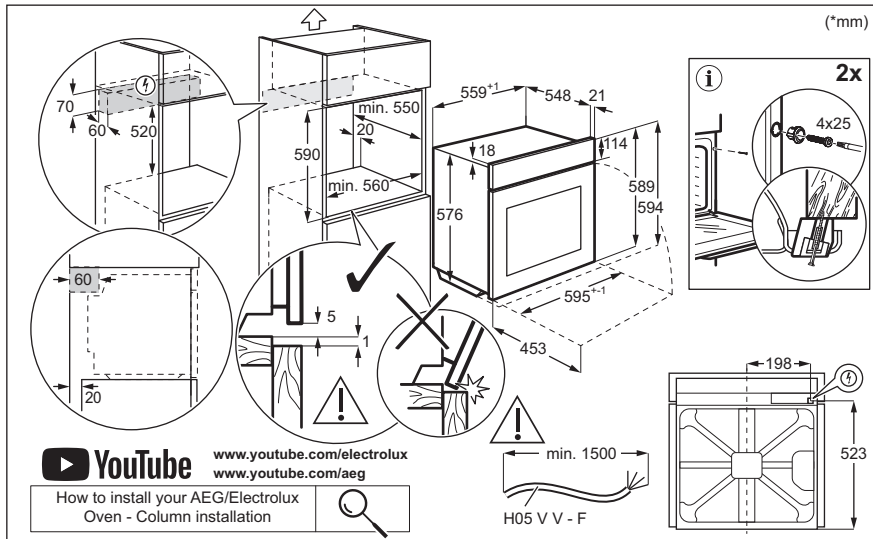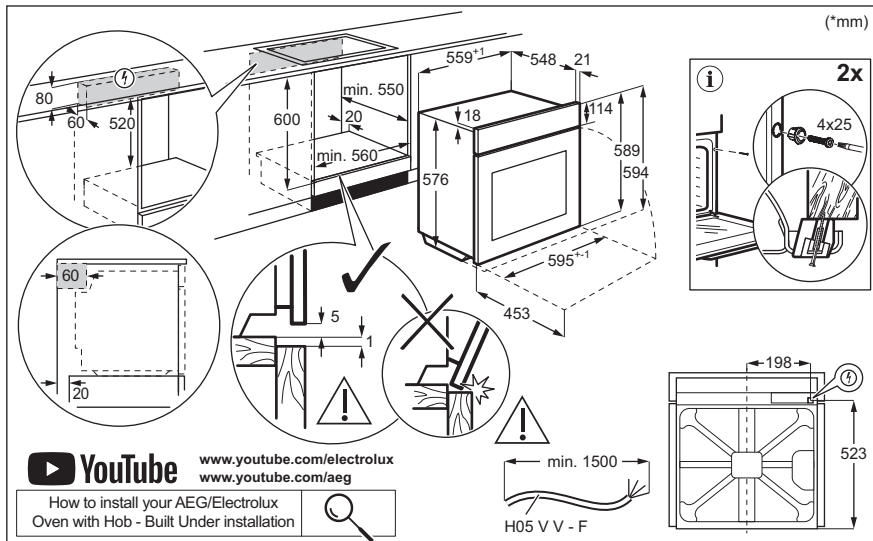

Welcome to Electrolux! Thank you for choosing our appliance.



Get usage advice, brochures, troubleshooting, service and repair information:
www.electrolux.com/support

Subject to change without notice.

CONTENTS

1. SAFETY INFORMATION..... 3

2. SAFETY INSTRUCTIONS..... 5

3. PRODUCT DESCRIPTION..... 7

4. CONTROL PANEL..... 8

5. BEFORE FIRST USE..... 8

6. DAILY USE..... 8

7. ADDITIONAL FUNCTIONS..... 9

8. CLOCK FUNCTIONS..... 10

9. USING THE ACCESSORIES..... 10

10. HINTS AND TIPS..... 12

11. CARE AND CLEANING..... 14

12. TROUBLESHOOTING..... 16

13. ENERGY EFFICIENCY..... 16

14. ENVIRONMENTAL CONCERNS..... 17

1. ⚠ SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damage that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

1.1 Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children of less than 8 years of age and persons with very extensive and complex disabilities shall

be kept away from the appliance unless continuously supervised.

- Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- **WARNING:** The appliance and its accessible parts become hot during use. Keep children and pets away from the appliance when in use and when cooling down.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

1.2 General Safety

- This appliance is for cooking purposes only.
- This appliance is designed for single household domestic use in an indoor environment.
- This appliance may be used in offices, hotel guest rooms, bed & breakfast guest rooms, farm guest houses and other similar accommodation where such use does not exceed (average) domestic usage levels.
- Only a qualified person must install this appliance and replace the cable.
- Do not use the appliance before installing it in the built-in structure.
- Disconnect the appliance from the power supply before carrying out any maintenance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements or the surface of the appliance cavity.

- Always use oven gloves to remove or insert accessories or ovenware.
- Use only the food sensor (core temperature sensor) recommended for this appliance.
- To remove the shelf supports first pull the front of the shelf support and then the rear end away from the side walls. Install the shelf supports in the opposite sequence.
- Do not use a steam cleaner to clean the appliance.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass door since they can scratch the surface, which may result in shattering of the glass.

2. SAFETY INSTRUCTIONS

2.1 Installation



WARNING!

Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instructions available on our website.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not pull the appliance by the handle.
- Install the appliance in a safe and suitable place that meets installation requirements.
- Keep the minimum distance from other appliances and units.
- Before mounting the appliance, check if the appliance door opens without restraint.
- The appliance is equipped with an electric cooling system. It must be operated with the electric power supply.

2.2 Electrical connection



WARNING!

Risk of fire and electric shock.

- All electrical connections should be made by a qualified electrician.

- The appliance must be earthed.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug and to the mains cable. Should the mains cable need to be replaced, this must be carried out by our Authorised Service Centre.
- Do not let mains cables touch or come near the appliance door or the niche below the appliance, especially when it operates or the door is hot.
- The shock protection of live and insulated parts must be fastened in such a way that it cannot be removed without tools.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- If the mains socket is loose, do not connect the mains plug.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Use only correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.

- The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm.
- This appliance is supplied with a main plug and a main cable.

Cable types applicable for installation or replacement for Europe:

H07 RN-F, H05 RN-F, H05 RRF, H05 VV-F, H05 V2V2-F (T90), H05 BB-F

For the section of the cable refer to the total power on the rating plate. You can also refer to the table:

Total power (W)	Section of the cable (mm ²)
maximum 1380	3x0.75
maximum 2300	3x1
maximum 3680	3x1.5

The earth cord (green / yellow cable) must be 2 cm longer than the brown phase and blue neutral cables.

2.3 Use



WARNING!

Risk of injury, burns and electric shock or explosion.

- Do not change the specification of this appliance.
- Make sure that the ventilation openings are not blocked.
- Do not let the appliance stay unattended during operation.
- Deactivate the appliance after each use.
- Be careful when you open the appliance door while the appliance is in operation. Hot air can release.
- Do not operate the appliance with wet hands or when it has contact with water.
- Do not apply pressure on the open door.
- Do not use the appliance as a work surface or as a storage surface.
- Open the appliance door carefully. The use of ingredients with alcohol can cause a mixture of alcohol and air.

- Do not let sparks or open flames to come in contact with the appliance when you open the door.
- Always use glass and jars approved for preserving purposes.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.



WARNING!

Risk of damage to the appliance.

- To prevent damage or discoloration to the enamel:
 - do not put ovenware or other objects in the appliance directly on the bottom.
 - do not put aluminium foil directly on the bottom of cavity of the appliance.
 - do not put water directly into the hot appliance.
 - do not keep moist dishes and food in the appliance after you finish the cooking.
 - be careful when you remove or install the accessories.
- Discoloration of the enamel or stainless steel has no effect on the performance of the appliance.
- Use a deep pan for moist cakes. Fruit juices cause stains that can be permanent.
- Always cook with the appliance door closed.
- If the appliance is installed behind a furniture panel (e.g. a door) make sure the door is never closed when the appliance operates. Heat and moisture can build up behind a closed furniture panel and cause subsequent damage to the appliance, the housing unit or the floor. Do not close the furniture panel until the appliance has cooled down completely after use.

2.4 Care and cleaning



WARNING!

Risk of injury, fire, or damage to the appliance.

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.

- Make sure the appliance is cold. There is the risk that the glass panels can break.
- Replace immediately the door glass panels when they are damaged. Contact the Authorised Service Centre.
- Be careful when you remove the door from the appliance, the door is heavy.
- Clean regularly the appliance to prevent the deterioration of the surface material.
- Clean the appliance with a moist soft cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- If you use an oven spray, follow the safety instructions on its packaging.

2.5 Internal lighting



WARNING!

Risk of electric shock.

- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational

status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.

- This product contains a light source of energy efficiency class G.
- Use only lamps with the same specifications.

2.6 Service

- To repair the appliance contact the Authorised Service Centre.
- Use original spare parts only.

2.7 Disposal




WARNING!

Risk of injury or suffocation.

- Contact your municipal authority for information on how to dispose of the appliance.
- Disconnect the appliance from the mains supply.
- Cut off the mains electrical cable close to the appliance and dispose of it.

3. PRODUCT DESCRIPTION

3.1 General overview

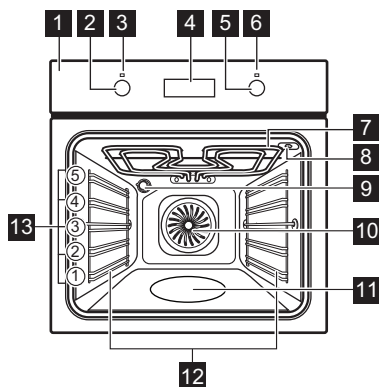

1 Control panel

- 2** Knob for the heating functions
- 3** Power lamp / symbol
- 4** Display
- 5** Control knob (for the temperature)
- 6** Temperature indicator / symbol
- 7** Heating element
- 8** Socket for the food sensor
- 9** Lamp
- 10** Fan
- 11** Cavity embossment - Aqua cleaning container
- 12** Shelf support, removable
- 13** Shelf positions

4. CONTROL PANEL

4.1 Turning the appliance on and off

To turn on the appliance:

1. Press the knobs. The knobs come out.
2. Turn the knob for the heating functions to select a function.
3. Turn the control knob to adjust settings.

To turn off the appliance: turn the knob for the heating functions to the off position .


4.2 Sensor fields / Buttons

 To set the time.

 To set a clock function.

 To set the time.

4.3 Display

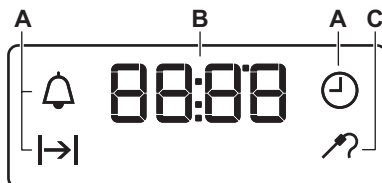

A. Clock functions

B. Timer

C. Food sensor indicator

5. BEFORE FIRST USE

WARNING!

Refer to Safety chapters.

5.1 Setting the time

After the first connection to the mains, wait until the display shows: "00:00" or "12:00" (depending on the model).

1.  - press to set the time.
2.  - press to confirm it or the set time of day will be saved automatically after 5 seconds.

5.2 Initial preheating and cleaning

Preheat the empty appliance before the first use and contact with food. The appliance can emit unpleasant smell and smoke. Ventilate the room during preheating.

1. Remove all accessories and removable shelf supports from the appliance.
2. Set the function . Set the maximum temperature. Let the appliance operate for 1 h.
3. Set the function . Set the maximum temperature. Let the appliance operate for 15 min.
4. Set the function . Set the maximum temperature. Let the appliance operate for 15 min.
5. Turn off the appliance and wait until it is cold.
6. Clean the appliance and the accessories only with a microfibre cloth, warm water and a mild detergent.
7. Put the accessories and removable shelf supports back to their initial position.

6. DAILY USE

WARNING!

Refer to Safety chapters.

6.1 Heating functions

	Light To turn on the lamp.
	Moist Fan Baking This function is designed to save energy during cooking. When you use this function, the temperature inside the appliance may differ from the set temperature. The residual heat is used. The heating power may be reduced. For more information refer to "Daily Use" chapter, Notes on: Moist Fan Baking.
	Conventional Cooking / Aqua Clean To bake and roast food on one shelf position. Refer to "Care and cleaning" chapter for more information about: Aqua Clean.
	Bottom Heat To bake cakes with crispy bottom and to preserve food.
	True Fan Cooking To roast meat and bake cakes. Set a lower temperature than for Conventional Cooking as the fan distributes heat evenly in the oven interior.
	Fast Grilling To grill thin pieces of food in large quantities and to toast bread.
	Turbo Grilling To roast large meat joints or poultry with bones on one shelf position. To bake gratins and to brown.
	Pizza Function To bake pizza and other dishes that require more heat from below.



Defrost

To defrost food (vegetables and fruit). The defrosting time depends on the amount and size of the frozen food.

6.2 Notes on: Moist Fan Baking

This function was used to comply with the energy efficiency class and ecodesign requirements (according to EU 65/2014 and EU 66/2014). Tests according to: IEC/EN 60350-1.

The oven door should be closed during cooking so that the function is not interrupted and the oven operates with the highest energy efficiency possible.

When you use this function the lamp automatically turns off.

For the cooking instructions refer to "Hints and tips" chapter, Moist Fan Baking. For general energy saving recommendations refer to "Energy Efficiency" chapter, Energy saving tips.

6.3 Setting a heating function

1. Turn the knob for the heating functions to select a heating function.
2. Turn the control knob to select the temperature.
3. When the cooking ends, turn the knobs to the off position to turn off the appliance.

7. ADDITIONAL FUNCTIONS

7.1 Cooling fan

When the appliance operates, the cooling fan turns on automatically to keep the surfaces of the appliance cool. If you turn off the appliance, the cooling fan can continue to operate until the appliance cools down.

7.2 Safety thermostat

Incorrect operation of the oven or defective components can cause dangerous overheating. To prevent this, the oven has a safety thermostat which interrupts the power supply. The oven turns on again automatically when the temperature drops.

8. CLOCK FUNCTIONS

8.1 Clock functions table

	Time of Day To set, change or check the time of day.
	Duration To set how long the appliance works.
	Minute Minder To set a countdown. This function has no effect on the operation of the appliance. You can set this function at any time, also when the appliance is off.

8.2 Setting: Time of Day

1.  - press repeatedly to change the time of day.  - flashes.
2.  ,  - press to set the time.
After approximately 5 sec, the flashing stops and the display shows the time.
 - flashes when you connect the appliance to the electrical supply, when there was a power cut or when the timer is not set.  ,  - press to set the time.

8.3 Setting: Duration

1. Set a heating function and the temperature.

2.  - press repeatedly.  - flashes.

3.  ,  - press to set the: Duration.

The display shows  .  - flashes when the set time ends. The signal sounds and the appliance turns off.

4. Press any button to stop the signal.
5. Turn the knobs to the off position.

8.4 Setting: Minute Minder

1.  - press repeatedly.  - flashes.

2.  ,  - press to set the time.

The function starts automatically after 5 sec. When the set time ends, the signal sounds.

3. Press any button to stop the signal.
4. Turn the knobs to the off position.

8.5 Cancelling: Clock functions

1.  - press repeatedly until the clock function symbol starts to flash.

2. Press and hold .

The clock function turns off after few seconds.

9. USING THE ACCESSORIES

WARNING!

Refer to Safety chapters.


9.1 Inserting accessories

Accessories available depending on model. Scan the QR code to check how to use accessories supplied with your appliance. You can order optional accessories separately. For more information, please contact your local supplier.



A small indentation at the top increases safety and provides tilt protection. The indentations are also anti-tip devices. The rim around the shelf prevents cookware from slipping off the shelf.

Insert the accessory (wire shelf / tray) between the guide bars of the shelf support. Make sure that the shelf touches the back of the oven interior and the feet point down.

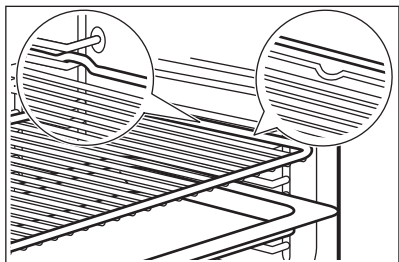

If your tray has a slope, position it towards the back of the oven interior.

If there is an inscription on the accessory, make sure it is facing you.

If you are using a tray with holes place the tray / pan underneath, to collect dripping liquids.

9.2 Food Sensor

It measures the temperature inside the food.

There are two temperatures to be set:

- °C - the temperature inside the appliance. It should be at least 25 °C higher than the food core temperature.
-  - the food core temperature.

Recommendations:


- Ingredients should be at room temperature.
- Do not use it for liquid dishes.
- During cooking the needle of the food sensor must be fully inserted in the dish.

Cooking with: Food Sensor

WARNING!


There is a risk of burns as Food Sensor and shelf supports become hot. Do not touch Food Sensor handle with bare hands. Always use oven gloves.

1. Insert Food Sensor inside the dish:
Meat, poultry and fish
Insert the entire needle of the Food Sensor into the centre of meat or fish at its thickest part.

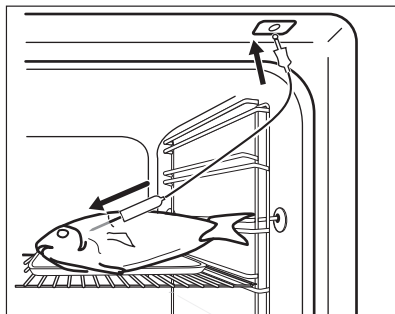

Casserole

Insert the tip of Food Sensor exactly in the centre of the casserole. Food Sensor should be stabilized in one place during baking. Use a solid ingredient to achieve that. Use the rim of the baking dish to support the silicone handle of Food Sensor. The tip of Food Sensor should not touch the bottom of a baking dish.

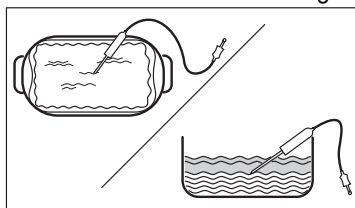

2. Plug Food Sensor into the socket located inside the appliance. Refer to "Product description".

The indicator for the core temperature sensor  flashes.

3. Press:  or  to set the food core temperature. You can set the temperature from 30 °C to 99 °C.
4. Set a heating function and, if necessary, the oven temperature.

When food reaches the set temperature, the signal sounds. Press any symbol to stop the signal. You can continue cooking to make sure the food is well done.

5. Turn off the appliance.
6. Remove Food Sensor plug from the socket and remove the dish from the appliance.

You can change the temperature at any time during the cooking. Press  to change the set food core temperature.

10. HINTS AND TIPS

10.1 Cooking recommendations

The temperature and cooking times in the tables are for guidance only. They depend on the recipes, quality and quantity of the ingredients used.

Your appliance may bake or roast differently than your previous appliance. The hints below show recommended settings for temperature, cooking time and shelf position for specific types of the food.

Count the shelf positions from the bottom of the oven floor.

If you cannot find the settings for a specific recipe, look for a similar one.

For energy saving tips refer to "Energy efficiency" chapter.

Symbols used in the tables:

	Food type
	Heating function
	Temperature

	Accessory
	Shelf position
	Cooking time (min)

10.2 Moist Fan Baking - recommended accessories

Use dark and non-reflective tins and containers. They have better heat absorption than light colour and reflective dishes.

- **Pizza pan** - dark, non-reflective, diameter 28cm
- **Baking dish** - dark, non-reflective, diameter 26cm
- **Ramekins** - ceramic, diameter 8cm, height 5 cm
- **Flan base tin** - dark, non-reflective, diameter 28cm

10.3 Moist Fan Baking

For the best results follow suggestions listed in the table below.

		°C		
Sweet rolls, 12 pieces	baking tray or dripping pan	175	3	40 - 50
Rolls, 9 pieces	baking tray or dripping pan	180	2	35 - 45
Pizza, frozen, 0.35 kg	wire shelf	180	2	45 - 55
Swiss roll	baking tray or dripping pan	170	2	30 - 40
Brownie	baking tray or dripping pan	170	2	45 - 50
Soufflé, 6 pieces	ceramic ramekins on wire shelf	190	3	45 - 55
Sponge flan base	flan base tin on wire shelf	180	2	35 - 45
Victoria sandwich	baking dish on wire shelf	170	2	35 - 50
Poached fish, 0.3 kg	baking tray or dripping pan	180	2	35 - 45
Whole fish, 0.2 kg	baking tray or dripping pan	180	3	25 - 35
Fish fillet, 0.3 kg	pizza pan on wire shelf	170	3	30 - 40

		°C		
Poached meat, 0.25 kg	baking tray or dripping pan	180	3	35 - 45
Shashlik, 0.5 kg	baking tray or dripping pan	180	3	40 - 50
Cookies, 16 pieces	baking tray or dripping pan	150	2	30 - 45
Macaroons, 20 pieces	baking tray or dripping pan	180	2	45 - 55
Muffins, 12 pieces	baking tray or dripping pan	170	2	30 - 40
Savory pastry, 16 pieces	baking tray or dripping pan	170	2	35 - 45
Short crust biscuits, 20 pieces	baking tray or dripping pan	150	2	40 - 50
Tartlets, 8 pieces	baking tray or dripping pan	170	2	30 - 40
Vegetables, poached, 0.4 kg	baking tray or dripping pan	180	2	35 - 45
Vegetarian omelette	pizza pan on wire shelf	180	3	35 - 45
Mediterranean vegetables, 0.7 kg	baking tray or dripping pan	180	4	35 - 45

10.4 Information for test institutes

Tests according to IEC 60350-1.

				°C	
Small cakes, 20 per tray	Conventional Cooking	Baking tray	3	170	20 - 35
Small cakes, 20 per tray	True Fan Cooking	Baking tray	3	150 - 160	20 - 35
Small cakes, 20 per tray	True Fan Cooking	Baking tray	2 and 4	150 - 160	20 - 35
Apple pie, 2 tins Ø20 cm	Conventional Cooking	Wire shelf	2	180	70 - 90
Apple pie, 2 tins Ø20 cm	True Fan Cooking	Wire shelf	2	160	70 - 90
Fatless sponge cake, cake mould Ø26 cm ¹⁾	Conventional Cooking	Wire shelf	2	170	40 - 50
Fatless sponge cake, cake mould Ø26 cm ¹⁾	True Fan Cooking	Wire shelf	2	160	40 - 50
Fatless sponge cake, cake mould Ø26 cm ¹⁾	True Fan Cooking	Wire shelf	2 and 4	160	40 - 60
Short bread	True Fan Cooking	Baking tray	3	140 - 150	20 - 40
Short bread	True Fan Cooking	Baking tray	2 and 4	140 - 150	25 - 45
Short bread	Conventional Cooking	Baking tray	3	140 - 150	25 - 45
Toast ¹⁾	Grill	Wire shelf	4	max.	1 - 5

¹⁾ Preheat the appliance for 10 minutes.

11. CARE AND CLEANING

WARNING!

Refer to Safety chapters.

11.1 Notes on cleaning

Cleaning Agents

- Clean the front of the appliance only with a microfibre cloth with warm water and a mild detergent. Clean and check the door gasket around the frame of the cavity.
- Use a cleaning solution to clean metal surfaces.
- Clean stains with a mild detergent.

Everyday Use

- Clean the interior of the appliance after each use. Fat accumulation or other residue may cause fire.
- Moisture can condense in the appliance or on the door glass panels. To decrease the condensation, let the appliance work for 10 minutes before cooking. Do not store food in the appliance for longer than 20 minutes. Dry the interior of the appliance only with a microfibre cloth after each use.


Accessories

- Clean all accessories after each use and let them dry. Use only a microfibre cloth with warm water and a mild detergent. Do not clean the accessories in a dishwasher.
- Do not clean the non-stick accessories using abrasive cleaner or sharp-edged objects.

11.2 Removing the shelf supports

Remove the shelf supports to clean the appliance.

1. Turn off the appliance and wait until it is cold.
2. Pull the front of the shelf support away from the side wall.
3. Pull the rear end of the shelf support away from the side wall and remove it.

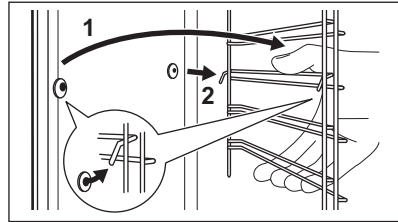

4. Install the shelf supports in the opposite sequence.

If the telescopic runners are supplied, its retaining pins must point to the front.

11.3 Aqua Clean

This cleaning procedure uses humidity to remove remaining fat and food particles from the appliance.

1. Pour water into the cavity embossment: 300 ml.
2. Set the function .
3. Set the temperature to 90 °C.
4. Let the appliance work for 30 min.
5. Turn off the appliance.
6. Wait until the appliance is cold. Dry the cavity with a soft cloth.


11.4 Removing and installing door

The oven door has two glass panels. You can remove the oven door and the internal glass panel to clean it. Read the whole "Removing and installing door" instruction before you remove the glass panels.


CAUTION!

Do not use the appliance without the glass panels.


1. Open the door fully and hold both hinges.

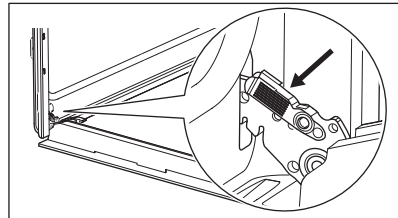


2. Lift and pull the latches until they click.

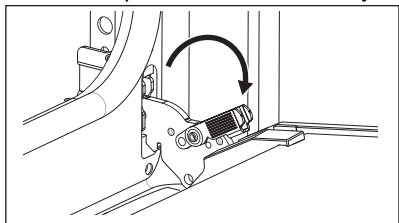


3. Close the oven door halfway to the first opening position. Then lift and pull to remove the door from its seat.

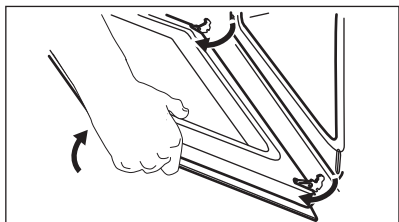

4. Put the door on a soft cloth on a stable surface.
5. Hold the door trim **B** on the top edge of the door at the two sides and push inwards to release the clip seal.

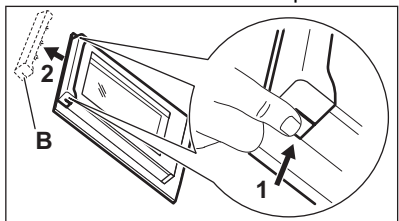

6. Pull the door trim to the front to remove it.
7. Hold the door glass panel by its top edge and carefully pull it out. Make sure the glass slides out of the supports completely.

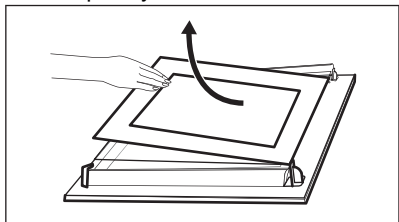


8. Clean the glass panels with water and soap. Dry the glass panels carefully. Do not clean the glass panels in the dishwasher.
9. After cleaning, install the glass panel and the oven door.

If the door is installed correctly, you will hear a click when closing the latches.

The screen-printing zone must face the inner side of the door. Make sure that after the installation the surface of the glass panel frame on the screen-printing zones is not rough when you touch it.

When installed correctly, the door trim clicks.

Make sure that you install the internal glass panel **A** in the seats correctly.

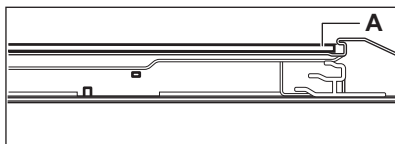

11.5 Replacing the lamp

WARNING!

Risk of electric shock.
The lamp can be hot.

1. Turn off the appliance and wait until it is cold.
2. Disconnect the appliance from the mains.
3. Place the cloth on the oven floor.

CAUTION!

Always hold the halogen lamp with a cloth to prevent grease residue from burning on the lamp.

Back lamp

1. Turn the glass cover to remove it.
2. Clean the glass cover.
3. Replace the lamp with a suitable 300 °C heat-resistant lamp.
4. Install the glass cover.

12. TROUBLESHOOTING



WARNING!

Refer to Safety chapters.

12.1 What to do if...

In any cases not included in this table please contact an Authorised Service Centre.

Problem	Cause and remedy
The appliance does not heat up.	The fuse is blown. Make sure that the fuse is the cause of the malfunction. If the problem persists, contact a qualified electrician.
The Food Sensor does not operate.	The plug of the Food Sensor is not fully inserted into the socket.
The door gasket is damaged.	Do not use the appliance. Contact an Authorised Service Centre.
The display shows "00:00" or "12:00".	There was a power cut. Set the time of day. Refer to "Before first use".

Problem	Cause and remedy
The lamp does not work.	The lamp is burnt out. Replace the lamp. Refer to "Care and cleaning", Replacing the lamp.

12.2 Service data

If you cannot find a solution to the problem yourself, contact your dealer or an Authorised Service Centre.

The necessary data for the service centre is on the rating plate. The rating plate is located on the front frame of the appliance. It is visible when you open the door. Do not remove the rating plate from the appliance.

We recommend that you write the data here:

Model (MOD.):

Product number (PNC):

Serial number (S.N.):

13. ENERGY EFFICIENCY

13.1 Product Information Sheet and Product Information according to EU Energy Labelling and Ecodesign Regulations

Supplier's name	Electrolux
Model identification	COB402V 949286665 EOK5B0B1 949286663 EOK5B0V1 949286664
Energy Efficiency Index	81.2
Energy efficiency class	A+
Energy consumption with a standard load, conventional mode	0.93 kWh/cycle
Energy consumption with a standard load, fan-forced mode	0.69 kWh/cycle
Number of cavities	1
Heat source	Electricity
Volume	72 l

Type of oven	Built-In Oven	
Mass	COB402V	29.8 kg
	EOK5B0B1	29.1 kg
	EOK5B0V1	29.2 kg

IEC/EN 60350-1 - Household electric cooking appliances - Part 1: Ranges, ovens, steam ovens and grills - Methods for measuring performance.

13.2 Product Information for power consumption and maximum time to reach applicable low power mode

Power consumption in standby	0.8 W
Maximum time needed for the equipment to automatically reach the applicable low power mode	20 min

13.3 Energy saving tips

Following tips below will help you save energy when using your appliance.

Make sure that the appliance door is closed when the appliance operates. Do not open the appliance door too often during cooking. Keep the door gasket clean and make sure it is well fixed in its position.

Use metal cookware and dark, non-reflective tins and containers to improve energy saving.

Do not preheat the appliance before cooking unless specifically recommended.

Keep breaks between baking as short as possible when you prepare a few dishes at one time.

Cooking with fan
When possible, use the cooking functions with fan to save energy.

Residual heat
When the cooking duration is longer than 30 min, reduce the appliance temperature to minimum 3 - 10 min before the end of cooking. The residual heat inside the appliance will continue to cook.

Use the residual heat to keep the food warm or warm up other dishes.

Keep food warm
Choose the lowest possible temperature setting to use residual heat and keep the food warm.

Moist Fan Baking
Function designed to save energy during cooking.

When you use this function the lamp is off.

14. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of

appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

Velkomin(n) til Electrolux! Þakka þér fyrir að velja heimilistækioð okkar.



Fáðu notkunarleiðbeiningar, bæklinga, bilanaleit, þjónustu- og viðgerðarupplýsingar:
www.electrolux.com/support

Með fyrirvara á breytingum.

EFNISYFIRLIT

1. ÖRYGGISUPPLÝSINGAR.....	18
2. ÖRYGGISLEIÐBEININGAR.....	20
3. VÖRULÝSING.....	23
4. STJÓRNBOÐ.....	23
5. FYRIR FYRSTU NOTKUN.....	23
6. DAGLEG NOTKUN.....	24
7. VIÐBÓTARAÐGERÐIR.....	25
8. KLUKKUAÐGERÐIR.....	25
9. NOTKUN FYLGIHLUTA.....	26
10. ÁBENDINGAR OG GÓÐ RÁÐ.....	27
11. UMHIRÐA OG HREINSUN.....	29
12. BILANALEIT.....	31
13. ORKUNÝTNI.....	32
14. UMHVERFISMÁL.....	33

1. ⚠ ÖRYGGISUPPLÝSINGAR

Fyrir uppsetningu og notkun heimilistækisins skal lesa meðfylgjandi leiðbeiningar vandlega. Framleiðandinn ber ekki ábyrgð á neinum meiðslum eða skemmdum sem leiða af rangri uppsetningu eða notkun. Geymdu alltaf leiðbeiningarnar á öruggum stað þar sem auðvelt er að nálgast þær til síðari notkunar.

1.1 Öryggi barna og viðkvæmra einstaklinga

- Börn, 8 ára og eldri og fólk með minnkaða líkamlega-, skyn- eða andlega getu, eða sem skortir reynslu og þekkingu, mega nota þetta tæki, ef þau eru undir eftirliti eða hafa verið veittar leiðbeiningar varðandi örugga notkun tækisins og ef þau skilja hættuna sem því fylgir. Halda skal börnum yngri

en 8 ára gömlum og fólki með mjög miklar og flóknar fatlanir frá heimilistækinu, nema þau séu undir stöðugu eftirliti.

- Hafa ætti eftirlit með börnum til að tryggja að þau leiki sér ekki með heimilistækið.
- Haltu öllum umbúðum frá börnum og fargaðu þeim á viðeigandi hátt.
- VIÐVÖRUN: Heimilistækið og aðgengilegir hlutar þess hitna meðan á notkun stendur. Haltu börnum og gæludýrum fjarri heimilistækinu þegar það er í notkun og þegar það kólnar.
- Ef heimilistækið er með barnalæsingu ætti hún að vera virkjuð.
- Börn eiga ekki að hreinsa eða framkvæma notandaviðhald á heimilistækinu án eftirlits.

1.2 Almennt öryggi

- Þetta heimilistæki er eingöngu ætlað til matreiðslu.
- Þetta heimilistæki er hannað til notkunar innanhúss á heimilum.
- Þetta heimilistæki má nota á skrifstofum, í herbergjum hótela, herbergjum gestahúsa, bændagistingum og öðrum sambærilegum gistirýmum þar sem notkun er ekki meiri en almenn (meðal) heimilisnotkun.
- Einungis til þess hæfur aðili má setja upp þetta heimilistæki og skipta um snúruna.
- Ekki má nota heimilistækið fyrr en innbyggða virkið hefur verið uppsett.
- Aftengdu heimilistækið frá rafmagns- og vatnsinntaki áður en hvers kyns viðhaldsvinna fer fram.
- Ef rafmagnssnúra er skemmd verður framleiðandi, viðurkennd þjónustumiðstöð, eða álíka hæfur aðili að skipta um hana til að forðast hættu vegna rafmagns.
- VIÐVÖRUN: Tryggðu að slökkt sé á heimilistækinu áður en þú skiptir um ljósið til að forðast möguleika á raflosti.
- VIÐVÖRUN: Heimilistækið og aðgengilegir hlutar þess hitna meðan á notkun stendur. Gæta ætti varúðar þegar

hitunarelementin eru snert eða yfirborð holrýmis heimilistækisins.

- Notaðu alltaf hanska við að taka úr og setja í aukahluti eða eldföst matarílát.
- Notaðu aðeins þann matarmæli (kjöthitamæli) sem ráðlagður er fyrir þetta heimilistæki.
- Til þess að taka hillustuðninginn úr skal fyrst toga í framhluta hillustuðningsins og síðan afturhluta hans frá hliðarveggjunum. Komdu hilluberunum fyrir í öfugri röð.
- Notaðu ekki gufuhreinsibúnað til að hreinsa heimilistækið.
- Notaðu ekki sterk tærandi hreinsiefni eða beittar málmsköfur til að hreinsa glerhurðina þar sem slíkt getur rispað yfirborðið, sem getur aftur leitt til þess að glerið brotnar.

2. ÖRYGGISLEIÐBEININGAR

2.1 Uppsetning

AÐVÖRUN!

Einungis til þess hæfur aðili má setja upp þetta heimilistæki.

- Fjarlægðu allar umbúðir.
- Ekki setja upp eða nota skemmt heimilistæki.
- Fylgdu uppsetningarleiðbeiningunum sem eru á vefsíðu okkar.
- Alltaf skal sýna aðgát þegar heimilistækið er fært vegna þess að það er þungt. Notaðu alltaf öryggishanska og lokaðan skóbúnað.
- Dragðu heimilistækið ekki á handfanginu.
- Settu heimilistækið upp á öruggum og hentugum stað sem uppfyllir uppsetningarkröfur.
- Haltu lágmarksfjarlægð frá öðrum heimilistækjum og einingum.
- Áður en þú setur upp ofninn skaltu athuga hvort hurðin opnast án heftingar.
- Heimilistækið er útbúið rafstýrðu kælikerfi. Það þarf rafstraum til að geta gengið.

2.2 Rafmagnstenging

AÐVÖRUN!

Hætta á eldi og raflosti.

- Allar rafmagnstengingar skulu framkvæmdar af viðurkenndum rafvirkja.
- Heimilistækið verður að vera jarðtengt.
- Gakktu úr skugga um að færribreyturnar á merkiplötunni séu samhæfar við rafmagnsflokkun aðalæðar afgangja.
- Notaðu alltaf rétt ísetta innstungu sem ekki veldur raflosti.
- Notaðu ekki fjöltengi eða framlengingarsnúrur.
- Gakktu úr skugga um að rafmagnsklín og snúran verði ekki fyrir skemmdum. Ef skipta þarf um rafmagnssnúru verður viðurkennd þjónustumiðstöð okkar að sjá um það.
- Ekki láta rafmagnssnúrurnar snerta eða koma nálægt hurð heimilistækisins, eða skotið undir heimilistækinu, sérstaklega þegar það er í gangi eða hurðin er heit.
- Vörn lifandi og einangraðra hluta gegn raflosti verður að vera fest þannig að ekki sé hægt að fjarlægja hana án verkfæra.
- Aðeins skal tengja rafmagnsklóna við rafmagnsinnstunguna í lok

- uppsetningarinnar. Gakktu úr skugga um að rafmagnsklóin sé aðgengileg eftir uppsetningu.
- Ef rafmagnsinnstungan er laus, skal ekki tengja rafmagnsklóna.
 - Ekki toga í snúruna til að taka tækið úr sambandi. Taktu alltaf um klóna.
 - Notaðu aðeins réttan einangrunarbúnað: Línuvannarstraumlöka, öryggi (öryggi með skrúfgangi fjarlægð úr höldunni), lekalíða og spólurofa.
 - Rafmagnsuppsetningin verður að vera með einangrunarbúnað sem leyfir þér að aftengja tækið frá stofnæð á öllum pólum. Einangrunarbúnaðurinn verður að hafa að lágmarki 3 mm snertiopnunarviðd.
 - Þessu tæki fylgja rafmagnskló og -snúra.

Tegundir kapla sem hægt er að nota fyrir uppsetningu eða endurnýjun í Evrópu:

H07 RN-F, H05 RN-F, H05 RRF, H05 VV-F, H05 V2V2-F (T90), H05 BB-F

Fyrir þann hluta vírsins vísast til heildarorkunnar á upplýsingaspaldinu. Þú getur einnig vísað til töflunnar:

Heildarafl (W)	Hluti vírsins (mm ²)
hámark 1380	3x0.75
hámark 2300	3x1
hámark 3680	3x1.5

Jarðtengingin (grænn / gulur vír) verður að vera 2 cm lengri en brúni fasavírin og blái hlutlausí vírin.

2.3 Notkun



AÐVÖRUN!

Hætta á meiðslum, bruna og raflosti eða sprengingu.

- Breytið ekki eiginleikum heimilistækisins.
- Gangið úr skugga um að loftræstiop séu ekki stífluð.
- Látið heimilistækið ekki vera án eftirlits á meðan það er í gangi.
- Slökkvið á heimilistækinu eftir hverja notkun.

- Farið varlega þegar hurð heimilistækisins er opnuð á meðan það er í gangi. Heitt loft getur losnað út.
- Notið ekki heimilistækið með blautar hendur eða þegar það er í snertingu við vatn.
- Beitið ekki þrýstingi á opna hurð.
- Notið ekki heimilistækið sem vinnusvæði eða geymslusvæði.
- Opnið hurð heimilistækisins varlega. Notkun efna sem innihalda áfengi getur valdið blöndu af áfengi og lofti.
- Láttu ekki neista eða opinn eld komast í snertingu við heimilistækið þegar þú opnar hurðina.
- Notaðu alltaf gler og krúkkur sem eru með niðursuðusamþykki.
- Setjið ekki eldfim efni eða hluti bleytta með eldfimur efnum í, nálægt, eða á heimilistækið.



AÐVÖRUN!

Hætta á eldi og skemmdum á heimilistækinu.

- Til að koma í veg fyrir skemmdir eða aflitun á gljáhúðinni:
 - setjið ekki ofnáhöld eða aðra hluti beint á botn heimilistækisins.
 - setjið ekki álpappír beint á botn heimilistækisins.
 - setjið ekki vatn beint inn í heitt heimilistækið.
 - látið ekki raka rétti og rök matvæli vera inni í heimilistækinu eftir að matreiðslu er lokið.
 - farið varlega þegar aukahlutir eru fjarlægðir eða settir upp.
- Aflitun á glerungnum eða ryðfríu stáli hefur engin áhrif á getu eða frammistöðu heimilistækisins.
- Notið djúpa skúffu fyrir rakar kökur. Ávaxtasafi veldur blettum sem geta verið varanlegir.
- Alltaf skal elda með hurð heimilistækisins lokaða.
- Ef heimilistækið er uppsett bak við innréttingarplötu (t.d. hurð) þá þarf að ganga úr skugga um að hurðin sé aldrei lokuð þegar tækið er í notkun. Hiti og raki geta safnast upp bak við lokaða innréttingarplötu og leitt til skemmda á tækinu, ytra byrði tækisins eða gólfi. Því skal ekki loka innréttingarplötunni fyrr en

tækið hefur náð að kólna að fullu eftir notkun.

2.4 Umhirða og hreinsun

AÐVÖRUN!

Hætta á meiðslum, eldsvoða eða skemmdum á heimilistækinu.

- Áður en viðhald fer fram skal slökkva á heimilistækinu og aftengja rafmagnsklóna frá rafmagnsinnstungunni.
- Gakktu úr skugga um að heimilistækið sé kalt. Hætta er á því að glerplöturnar brotni.
- Skiptið umsvifalaust um glerplötur ef þær verða fyrir skemmdum. Hafðu samband við viðurkennda þjónustumiðstöð.
- Farðu varlega þegar þú tekur hurðina af heimilistækinu, því hurðin er þung.
- Hreinsaðu heimilistækið reglulega til að yfirborðsefnin á því endist betur.
- Hreinsaðu heimilistækið með mjúkum rökum klút. Notaðu aðeins hlutlaus þvottaefni. Notaðu ekki neinar vörur með svarfefnum, stálull, leysiefni eða málmhluti.
- Ef þú notar ofnasprey skaltu fara eftir öryggisleiðbeiningum á umbúðum þess.

2.5 Innri lýsing

AÐVÖRUN!

Hætta á raflosti.

- Varðandi ljósin inn í þessari vöru og ljós sem varahluti sem seld eru sérstaklega: Þessi ljós eru ætluð að standast öfgakenndar aðstæður í heimilistækjum eins og hitastig, titring, raka eða til að senda upplýsingar um rekstrarstöðu tækisins. Þau eru ekki ætluð til að nota í öðrum tækjum og henta ekki sem lýsing í herbergjum heimila.
- Þessi vara inniheldur ljósgjafa í orkunýtniflokki G.
- Notaðu aðeins ljós með sömu tæknilýsingu.

2.6 Þjónusta

- Hafðu samband við viðurkennda þjónustumiðstöð til að gera við heimilistækið.
- Notaðu eingöngu upprunalega varahluti.

2.7 Förgun


AÐVÖRUN!

Hætta á meiðslum eða köfnun.

- Hafðu samband við staðbundin yfirvöld fyrir upplýsingar um hvernig skuli farga heimilistækinu.
- Aftengdu tækið frá rafmagni.
- Klipptu rafmagnssnúruna af upp við heimilistækið og fargaðu henni.

3. VÖRULÝSING

3.1 Almennt yfirlit

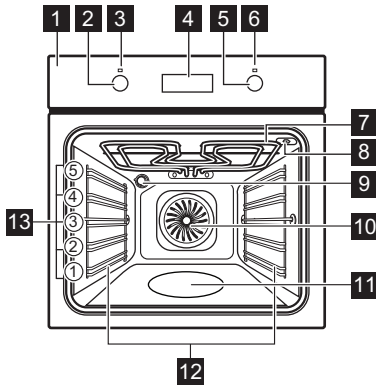

- 1 Stjórnborð
- 2 Hnúður fyrir hitunaraðgerðir
- 3 Aflljós/tákn
- 4 Skjár
- 5 Stjórnhnúður (fyrir hitastigið)
- 6 Hitavísir/tákn
- 7 Hitunareining
- 8 Innstunga fyrir matvælaskynjara
- 9 Ljós
- 10 Vifta
- 11 Holrými ofnhólfs - Vatnshreinsunarílát
- 12 Hilluberarar, lausir
- 13 Hillustöður

4. STJÓRNBORÐ

4.1 Kveikt og slökkt á heimilistækinu

Til að kveikja á heimilistækinu:

1. Ýttu á hnúðana. Hnúðarnir koma út.
2. Snúðu hnúðnum fyrir hitunaraðgerðir til að velja aðgerð.
3. Snúðu stjórnhnúðnum til að breyta stillingum.

Til að slökkva á heimilistækinu: snúðu hnúðnum fyrir hitunaraðgerðir í stöðuna slökkt .

4.2 Skynjarafletir/hnappar

— Til að stilla klukkuna.




Til að stilla klukkuaðgerð.



Til að stilla tímann.

4.3 Skjár

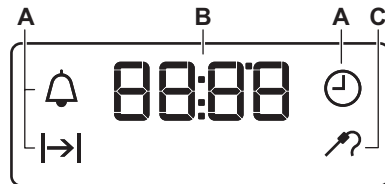

- A. Klukkuaðgerðir
- B. Tímastillir
- C. Vísir fyrir kjöthitamæli

5. FYRIR FYRSTU NOTKUN



ADVÖRUN!

Sjá kafla um Öryggismál.

5.1 tíminn stilltur

Eftir fyrstu tengingu við rafmagn skaltu bíða þar til skjáinn sýnir: "00:00" eða "12:00" (fer eftir gerðinni).

1. +, - ýttu á til að stilla tímann.

2. 🕒 - ýttu á til að staðfesta að innstiltur tími dags verði vistaður sjálfkrafa eftir 5 sekúndur.

5.2 Forhitun og hreinsun

Forhitaðu heimilistækið tómt fyrir fyrstu notkun og fyrstu snertingu við matvæli. Heimilistækið kann að gefa frá sér vonda lykt og reyk. Lofta skal rýmið meðan á forhitun stendur.

1. Fjarlægðu allan aukabúnað og lausa hillubera úr heimilistækinu.
2. Stilltu 🗲 aðgerðina. Stilltu hámarkshitastigið. Láttu heimilistækið ganga í 1 klst.

3. Stilltu 🗲 aðgerðina. Stilltu hámarkshitastigið. Láttu heimilistækið ganga í 15 mín.
4. Stilltu 🗲 aðgerðina. Stilltu hámarkshitastigið. Láttu heimilistækið ganga í 15 mín.
5. Slökktu á heimilistækinu og bíddu þar til það er kalt.
6. Hreinsaðu heimilistækið eingöngu með trefjaklút, volgu vatni og mildu hreinsiefni.
7. Settu fylgihlutina og fjarlægjanlegu hillustöðirnar aftur í sína upphaflegu stöðu.

6. DAGLEG NOTKUN

⚠️ AÐVÖRUN!

Sjá kafla um Öryggismál.

6.1 Hitunaraðgerðir

🔌	Létt Til að kveikja á ljósinu.
🔥	Bökun með rökum blæstri Þessi aðgerð er hönnuð til að spara orku á meðan eldað er. Þegar þú notar þessa aðgerð kann hitastigið í rýminu að vera frábrugðið innstillta hitastiginu. Afgangshiti er notaður. Hitunarkraftur kann að vera minni. Fyrir frekari upplýsingar má sjá kaflann „Dagleg notkun“, ráð fyrir: Bökun með rökum blæstri.
🗲	Hefðbundin matreiðsla / Vatnshreinsun Til að baka og steikja í einni hillustöðu. Sjá kaflann „Umhirða og hreinsun“ til að fá frekari upplýsingar um: Aqua Clean.
🗲	Undirhiti Til að baka kökur með stökkum botni og til að geyma mat.
🗲	Eldun með hefðbundnum blæstri Til að steikja kjöt og baka kökur. Stilltu á lægra hitastig en á yfir-undir hita þar sem viftan dreifir hitanum jafnt inni í ofninum.
🗲	Flýttigrillun Til að grilla þunnar sneiðar af mat í miklu magni og rista brauð.



Blástursgrillun

Til að steikja stór kjötstykki eða alifuglakjöt á beini á einni hillustöðu. Til að baka gratínrétti og til að brúna.



Þítsuadgerð

Til að baka pitsur og aðra rétti sem þurfa meiri undirhita.



Affrysta

Til að þíða matvæli (grænmeti og ávexti). Tímalengd affrystingar veltur á magni og stærð frosna matarins.

6.2 Athugasemdir varðandi: Bökun með rökum blæstri

Þessi aðgerð var notuð til að uppfylla skilyrði flokkunar á orkunýtni og vishönnunar (í samræmi við EU 65/2014 og EU 66/2014). Prófanir í samræmi við: IEC/EN 60350-1.

Ofnhurðin ætti að vera lokuð meðan á matreiðslu stendur þannig að aðgerðin verði ekki fyrir truflun og til þess að ofninn virki með bestu mögulegu orkunýtni.

Þegar þú notar þessa aðgerð slokknar ljósið sjálfkrafa.

Kynntu þér kaflann „Ábendingar og ráð“ varðandi eldunarleiðbeiningar, Bökun með rökum blæstri. Kynntu þér kaflann „Orkunýtni“, orkusparnaður varðandi almennar ráðleggingar hvað orkusparnað varðar.

6.3 Hitunaraðgerð stillt

1. Snúðu hnúðnum fyrir hitunaraðgerðir til að velja hitunaraðgerð.
2. Snúðu stjórnhnúðnum til að velja hitastigið.

3. Þegar eldun lýkur skal snúa hnúðunum í slökkva-stöðuna til að slökkva á heimilistækinu.

7. VIÐBÓTARAÐGERÐIR

7.1 Viftukæling

Þegar heimilistækið gengur kviknar sjálfkrafa á kæliviftunni til að halda yfirborðsflötum heimilistækisins svölum. Ef þú slekkur á heimilistækinu gengur kæliviftan áfram þangað til heimilistækið kólnar.

7.2 Öryggishitastillir

Röng notkun ofnsins eða bilun í íhlutum getur orsakað hættulega ofhitnun. Til að koma í veg fyrir þetta, hefur ofninn öryggishitastilli sem rýfur rafmagnstenginguna. Ofninn kveikir sjálfkrafa á sér aftur þegar hitastigið lækkar.

8. KLUKKUAÐGERÐIR

8.1 Tafla fyrir klukkuaðgerðir

	Tími dags Til að stilla, breyta eða sýna tíma dags.
	Tímalengd Til að stilla hversu lengi heimilistækið vinnur.
	Mínútumælir Að setja niðurtalningu. Þessi aðgerð hefur engin áhrif á notkun ofnsins. Þú getur stillt á þessa aðgerð hvenær sem er, einnig þegar slökkt er á heimilistækinu.

8.2 Stilling: Tími dags

1.  - ýttu endurtekið á til að breyta tíma dags.  - blikkar.
2.  ,  - ýttu á til að stilla tímann. Eftir um það bil 5 sek hættir blikkið og skjárin sýnir tímann.
-  - blikkar þegar þú tengir heimilistækið við rafmagn, þegar rafmagnsleysi varð eða þegar tíminn er ekki stilltur.  ,  - ýttu á til að stilla tímann.

8.3 Stilling: Tímalengd

1. Stilltu hitunaraðgerð og hitastigið.

2.  - ýttu endurtekið á  - blikkar.
3.  ,  - ýttu á til að stilla: Tímalengd. Skjárin sýnir  ,  - blikkar þegar innstilltum tíma er lokið. Hljóðmerkið heyrst og slokknar á heimilistækinu.
4. Ýttu á hvaða hnapp sem er til að stöðva merkið.
5. Snúðu hnúðunum í slökkva-stöðuna.

8.4 Stilling: Mínútumælir

1.  - ýttu endurtekið á  - blikkar.
2.  ,  - ýttu á til að stilla tímann. Aðgerðin hefst sjálfkrafa eftir 5 sek. Þegar innstilltum tíma lýkur hljómar merkið.
3. Ýttu á hvaða hnapp sem er til að stöðva merkið.
4. Snúðu hnúðunum í slökkva-stöðuna.

8.5 Hætta við: Klukkuaðgerðir

1.  - ýttu á ítrekað þangað til tákníð fyrir klukkuaðgerðina byrjar að blikka.
2. Ýttu á og haltu  . Klukkuaðgerðin slekkur á sér eftir nokkrar sekúndur.

9. NOTKUN FYLGIHLUTA

⚠ AÐVÖRUN!

Sjá kafla um Öryggismál.


9.1 Aukabúnaður settur í

Aukahlutir í boði eftir gerð. Skannaðu QR kóðann til að athuga hvernig nota á aukahlutina sem fylgja með heimilistækini. Hægt er að panta aukahluti sérstaklega. Til að fá frekari upplýsingar skaltu hafa samband við söluaðilann á staðnum.



Lítill skörð efst auka öryggi og veita vörn þegar þær halla. Skörðin eru einnig búnaður sem kemur í veg fyrir að hlutir renni af. Brúnin umhverfis hilluna kemur í veg fyrir að eldunaráhöld renni niður af hillunni.

Settu aukahlutinn (stálhillu / bökunarplötu) inn á milli rásanna á hilluberanum. Gakktu úr skugga um að hillan snerti bakhlíð ofnrýmisins og að fæturnir vísi niður.

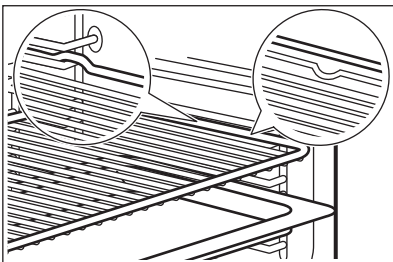

Ef bökunarplatan er með halla skaltu koma henni fyrir í átt að bakhlíð ofnsins.

Ef það er áletrun á aukahlutnum skaltu ganga úr skugga um að hann snúi að þér.

Ef þú ert að nota bökunarplötu skaltu setja bökunarplötuna / pönnuna undir, til að safna vökva sem drypur af.

9.2 Matvælaskynjari

Það mælir hitastigið inni í matnum.

Hægt er að stilla á tvö hitastig:

- °C - hitastigið inni í heimilistækini. Það ætti að vera að minnsta kosti 25 °C hærra en kjarnahiti matarins.

- °F - kjarnahitastig matarins.

Ráðleggingar:

- Hráefnin ættu að vera við stofuhita.
- Ekki nota það fyrir rétti sem eru vökvi.
- Á meðan eldun stendur verður nál kjarnhitamælisins að vera stungið alla leið inn í réttinn.

Eldað með: Matvælaskynjari


⚠ AÐVÖRUN!

Hætta er á að brenna sig þar sem kjarnhitamælirinn og hilluberarnir verða heitir. Ekki snerta handfang kjarnhitamælisins með berum höndum. Notaðu ávallt ofnhanska.

1. Settu kjarnhitamælinn inn í réttinn:


Kjöt, alifuglar og fiskur

Settu alla nálina á kjarnhitamælinum inn í mitt kjötið eða fiskinn þar sem þykktin er mest.

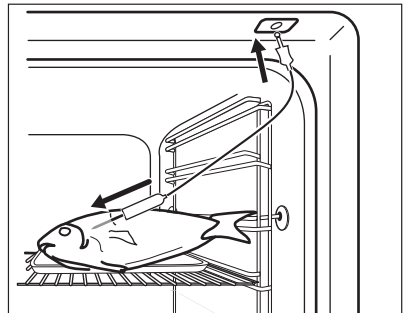

Pottréttur

Stingdu oddi kjarnhitamælisins nákvæmlega inn í miðju pottréttisins. Kjarnhitamælirinn ætti að vera stöðugur á einum stað meðan á bökun stendur. Notaðu gegnheilt hráefni til að ná því. Notaðu brún eldfasta mótsins til að styðja við silíkonhandfangið á kjarnhitamælinum. Oddurinn á kjarnhitamælinum ætti ekki að snerta botn eldfasta mótsins.

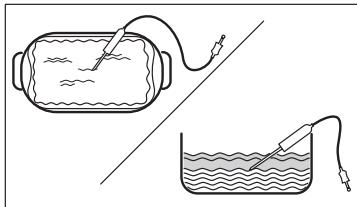

2. Stingdu kjarnhitamælinum í innstunguna sem staðsett er inni í heimilistækinu. Sjá kaflann „Vörulýsing“.

Vísirinn fyrir kjöthitamælinn blikkar.

3. Ýttu á: eða til að stilla kjarnhitastigið. Þú getur stillt hitastigið frá 30 °C upp í 99 °C.

4. Stilltu hitunaraðgerð og ef nauðsyn krefur, hitastig ofnsins.

Þegar matvælin ná innstilltu hitastigi hljómar merkið. Ýttu á hvaða tákn sem er til að stöðva merkið. Þú getur haldið áfram eldun til að ganga úr skugga um að matvælin séu fullleidd.

5. Slökktu á heimilistækinu.

6. Fjarlægðu kló kjarnhitamælisins úr innstungunni og taktu réttinn út úr heimilistækinu.

Þú getur breytt hitastiginu hvenær sem er meðan á eldun stendur. Ýttu á til að breyta kjarnahitastiginu.

10. ÁBENDINGAR OG GÓÐ RÁÐ

10.1 Ráðleggingar um eldun

Hitastig og eldunartími á töflunum er aðeins til viðmiðunar. Það fer eftir uppskriftunum, gæðum og magni hráefnisins sem notað er.

Heimilistæki þitt kann að baka eða steikja á annan hátt en það heimilistæki sem þú áttir áður. Ábendingarnar hér að neðan mæla með stillingum á hita, eldunartíma og hillustöðu fyrir tilteknan matartegundir.

Teldu hillustöðurnar að neðan frá botni ofnsins.

Ef þú finnur ekki stillingarnar fyrir ákveðna uppskrift skaltu leita að svipaðri uppskrift.

Fyrir almenn ráð um orkusparnað vísast til kaflans „Orkunýtni“.

Táknin á töflunni:

	Tegund matvæla
	Upphitunaraðgerð
	Hitastig
	Aukahlutur



Hillustaða



Eldunartími (mín)

10.2 Bökun með rökum blæstri - ráðlagðir fylgihlutir

Notaðu dökk form og ílát sem endurkasta ekki ljósi. Þau gleypa betur hita en ljósi litir og diskar sem endurkasta ljósi.

- **Pítsubakki** - dökkur, endurkastar ekki ljósi, ummál 28cm
- **Bökunarfát** - dökkt, endurkastar ekki ljósi, ummál 26cm
- **Ramekin-skálar** - keramik, ummál 8cm, hæð 5 cm
- **Bakki fyrir bökubotn** - dökkur, endurkastar ekki ljósi, ummál 28cm

10.3 Bökun með rökum blæstri

Til að fá sem bestan árangur skaltu fylgja uppástungunum sem taldar eru upp í töflunni hér að neðan.

Snúðar, 12 stykki	bökunarplata eða lekabakki	175	3	40 - 50

		°C		
Rúllutertur, 9 stykki	bökunarplata eða lekabakki	180	2	35 - 45
Frosin pítsa, 0.35 kg	vírhilla	180	2	45 - 55
Rúlluterta	bökunarplata eða lekabakki	170	2	30 - 40
Brúnkaka	bökunarplata eða lekabakki	170	2	45 - 50
Frauðréttur, 6 stykki	ramekin-skálar úr keramik á vírhillu	190	3	45 - 55
Svampbökubotnar	bakki fyrir bökubotn á vírhillu	180	2	35 - 45
Viktoríu-samloka	bökunardiskur á vírhillu	170	2	35 - 50
Fiskur soðinn við vægan hita, 0.3 kg	bökunarplata eða lekabakki	180	2	35 - 45
Heill fiskur, 0.2 kg	bökunarplata eða lekabakki	180	3	25 - 35
Fiskflök, 0.3 kg	pítsufat á vírhillu	170	3	30 - 40
Kjöt soðið við vægan hita, 0.25 kg	bökunarplata eða lekabakki	180	3	35 - 45
Shashlik, 0.5 kg	bökunarplata eða lekabakki	180	3	40 - 50
Smákökkur, 16 stykki	bökunarplata eða lekabakki	150	2	30 - 45
Makkarónur, 20 stykki	bökunarplata eða lekabakki	180	2	45 - 55
Formkökur, 12 stykki	bökunarplata eða lekabakki	170	2	30 - 40
Bragðmikið sætabrauð, 16 stykki	bökunarplata eða lekabakki	170	2	35 - 45
Smákökur úr bökudeigi, 20 stykki	bökunarplata eða lekabakki	150	2	40 - 50
Tartalettur, 8 stykki	bökunarplata eða lekabakki	170	2	30 - 40
Grænmeti soðið við vægan hita, 0.4 kg	bökunarplata eða lekabakki	180	2	35 - 45
Eggjakaka grænmetisættunnar	pítsufat á vírhillu	180	3	35 - 45
Grænmeti frá Miðjarðarhafinu, 0,7 kg	bökunarplata eða lekabakki	180	4	35 - 45

10.4 Upplýsingar fyrir prófunarstofnanir

Prófanir í samræmi við IEC 60350-1.

				°C	
Litlar kökur, 20 á plötu	Hefðbundin matreiðsla	Bökunarplata	3	170	20 - 35
Litlar kökur, 20 á plötu	Eldun með hefðbundnum blæstri	Bökunarplata	3	150 - 160	20 - 35

				°C	
Litlar kökur, 20 á plötu	Eldun með hefðbundnum blæstri	Bökunar-plata	2 og 4	150 - 160	20 - 35
Eplabaka, 2 dósir Ø20 cm	Hefðbundin matreiðsla	Vírhilla	2	180	70 - 90
Eplabaka, 2 dósir Ø20 cm	Eldun með hefðbundnum blæstri	Vírhilla	2	160	70 - 90
Fitulaus svampterta, köku-form Ø 26 cm ¹⁾	Hefðbundin matreiðsla	Vírhilla	2	170	40 - 50
Fitulaus svampterta, köku-form Ø 26 cm ¹⁾	Eldun með hefðbundnum blæstri	Vírhilla	2	160	40 - 50
Fitulaus svampterta, köku-form Ø 26 cm ¹⁾	Eldun með hefðbundnum blæstri	Vírhilla	2 og 4	160	40 - 60
Smjörbrauð	Eldun með hefðbundnum blæstri	Bökunar-plata	3	140 - 150	20 - 40
Smjörbrauð	Eldun með hefðbundnum blæstri	Bökunar-plata	2 og 4	140 - 150	25 - 45
Smjörbrauð	Hefðbundin matreiðsla	Bökunar-plata	3	140 - 150	25 - 45
Bauðrist ¹⁾	Grill	Vírhilla	4	hám.	1 - 5

¹⁾ Forhitaðu ofninn í 10 mínútur.

11. UMHIRÐA OG HREINSUN



ADVÖRUN!

Sjá kafla um Öryggismál.

11.1 Athugasemdir varðandi þrif

Hreinsiefni

- Hreinsaðu heimilistækið að framan eingöngu með trefjaklút með volgu vatni og mildu hreinsiefni. Hreinsaðu og kannaðu dyrapéttiborðann í ramma hólsins.
- Notaðu þrifalaun til að þrifa málmfleti.
- Þrífðu bletti með mildu hreinsiefni.

Dagleg notkun

- Hreinsaðu heimilistækið að innan eftir hverja notkun. Fituuppsöfnun eða aðrar leifar geta valdið eldsvoða.
- Raki getur þétt í heimilistækinu eða á glerplötum hurðarinnar. Til að minnka þéttingu skaltu láta heimilistækið vera í gangi í 10 mínútur áður en þú byrjar að

elda í því. Ekki geyma mat í heimilistækinu lengur en í 20 mínútur. Þurrkaðu heimilistækið að innan eingöngu með örtrefjaklút eftir hverja notkun.

Aukabúnaður


- Þrífðu alla aukahluti eftir hverja notkun og leyfðu þeim að þorna. Notið eingöngu trefjaklút með heitu vatni og mildu hreinsiefni. Ekki skal hreinsa aukahlutina í uppþvottavél.
- Ekki þrifa viðloðunarfríu aukahlutina með slípandi hreinsiefni eða hlutum með beittum brúnum.

11.2 Fjarlægðu hilluberana

Til að hreinsa heimilistækið skaltu fjarlægja hilluberana.

- Slökktu á heimilistækinu og bíddu þar til það er kalt.
- Togaðu framhluta hilluberans frá hliðarveggnum.

3. Togaðu afturenda hilluberans frá hliðarveggnum og fjarlægðu hann.

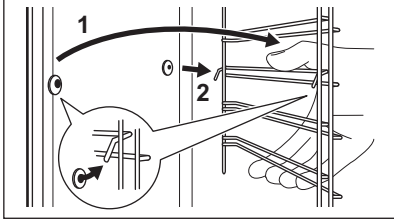

4. Komdu hilluberunum fyrir í öfugri röð. Ef útdraganlegu rennurnar fylgja með verða festipinnar þeirra að snúa fram.

11.3 Vatnshreinsun

Þetta hreinsunarferli notar raka til að fjarlægja fitu og mataragnir sem eftir verða í heimilistækinu.

1. Helltu vatni í hólf ofnrýmisins: 300 ml.
2. Stílltu á aðgerðina .
3. Stílltu hitastigið á 90 °C.
4. Láttu heimilistækið vinna í 30 mín.
5. Slökktu á heimilistækinu.
6. Bíddu þar til heimilistækið er orðið kalt. Þurrkaðu hólfíð með mjúkum klút.


11.4 Hurð fjarlægð og ísett

Ofnhurðin er með tvær glerplötur. Þú getur losað ofnhurðina og fjarlægt innri glerplötuna til að hreinsa hana. Lestu allar leiðbeiningar um „Hurð fjarlægð og ísett“ áður en þú fjarlægir glerplöturnar.


VARÚÐ!

Ekki nota heimilistækið án glerplatanna.


1. Opnaðu hurðina að fullu og haltu við báðar lamirnar.

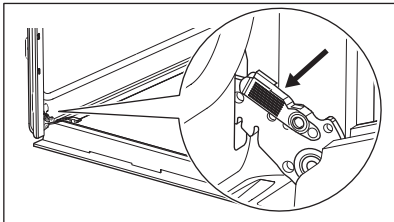


2. Lyftu og togaðu í krækjurnar þar til þær smella í stað.

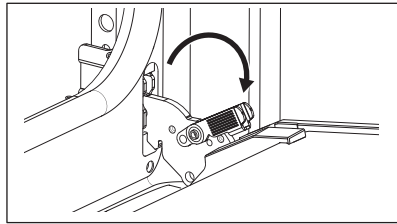


3. Lokaðu ofnhurðinni hálfra leið í fyrstu opnu stöðuna. Lyftu síðan og togaðu til að fjarlægja hurðina úr sæti sínu.

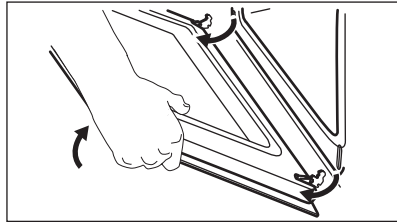

4. Settu hurðina niður á mjúkan klút á stöðugum fleti.
5. Haltu í hurðarklæðninguna **B** við efstu brún hurðarinnar á báðum hliðum og þrýstu inn á við til að losa klemmupétti.

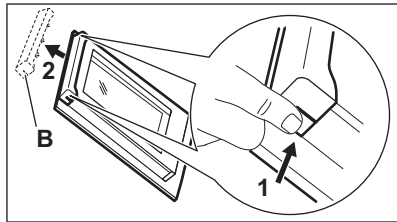

6. Togaðu hurðarklæðninguna fram á við til að fjarlægja hana.
7. Haltu í efri brúnina á glerplötu hurðarinnar og dragðu hana varlega út. Gakktu úr skugga um að glerið renni alla leið út úr berunum.

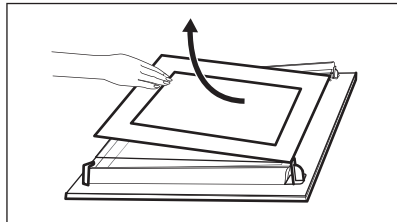


8. Hreinsaðu glerplöturnar með vatni og sápu. Þurrkaðu glerplöturnar varlega.

Ekki skal hreinsa glerplöturnar í uppþvottavél.

9. Að hreinsun lokinni skaltu setja glerplötuna og ofnhurðina aftur á ofninn. Ef hurðin hefur verið rétt sett upp þá muntu heyra smell þegar þú lokar krækjunum. Prentsvæði plötunnar verður að snúa að innri hlið hurðarinnar. Gakktu úr skugga um eftir uppsetninguna að yfirborð glerplöturammans á prentsvæði plötunnar sé ekki gróft viðkomu.

Þegar hún er rétt sett í, smellur hurðarklæðningin.

Gættu þess að setja innri glerplötuna **A** rétt í sætið.

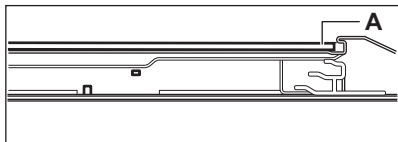

11.5 Skipt um ljósið

⚠ AÐVÖRUN!

Hætta á raflosti.
Ljósið getur verið heitt.

1. Slökktu á heimilistækinu og bíddu þar til það er kalt.
2. Aftengdu tækið frá aðalæðinni.
3. Settu klútinn á botninn í ofninum.

⚠ VARÚÐ!

Ávallt skal halda á halogen-ljósaperu með klút til að hindra að fituleifar brenni á ljósaperunni.

Bakljós

1. Snúðu glerhlífinni til að fjarlægja hana.
2. Hreinsaðu glerhlífina.
3. Skiptu um peru með viðeigandi 300 °C hitapolinni ljósaperu.
4. Komdu glerhlífinni fyrir.

12. BILANALET

⚠ AÐVÖRUN!

Sjá kafla um Öryggismál.

12.1 Hvað skal gera ef...

Hafðu samband við viðurkennda þjónustumiðstöð ef um atvik er að ræða sem ekki er að finna í þessari töflu.

Vandamál	Orsök og úrræði
Heimilistækið hitnar ekki.	Rafmagnsörygginn hefur slegið út. Gakktu úr skugga um að öryggið sé ástæða bilunarinnar. Ef vandamálið heldur áfram skal hafa samband við rafvirkja.
Matvælaskynjari virkar ekki.	Matvælaskynjari klóin er ekki að fullu sett inn í innstunguna.

Vandamál	Orsök og úrræði
Dyrabéttiborðinn er skemmdur.	Ekki nota heimilistækið. Hafðu samband við viðurkennda þjónustumiðstöð.
Skjárnir sýnir "00:00" eða "12:00".	Rafmagnið fór af. Stilltu tíma dags. Sjá „Fyrir fyrstu notkun“.
Ljósið virkar ekki.	Ljósaperan er ónýtt. Skiptu um ljósið. Sjá „Umhirða og hreinsun“, Skiptu um peruna.

12.2 Þjónustugögn

Ef þú getur ekki sjálf(ur) fundið lausn á vandamálinu skaltu hafa samband við söluaðila eða viðurkennda þjónustumiðstöð.

Þær nauðsynlegu upplýsingar sem þjónustumiðstöðin þarf á að halda eru á

merkiplötunni. Merkiplatan er staðsett á fremri rammaum á heimilistækinu. Hún er sýnileg þegar þú opnar ofninn. Fjarlægðu ekki merkiplötuna af heimilistækinu.

Við mælum með því að þú skrifir upplýsingarnar hér:

Módel (MOD.) :

Vörunúmer (PNC):

Raðnúmer (S.N.):

13. ORKUNÝTNI

13.1 Vöruupplýsingar og vöruupplýsingaskjal í samræmi við reglugerðir ESB um visthönnun og merkingar fyrir orkuupplýsingar

Heiti birgja	Electrolux	
Auðkenni tegundar	COB402V 949286665 EOK5B0B1 949286663 EOK5B0V1 949286664	
Orkunýtnistuðull	81.2	
Orkunýtniflokkur	A+	
Orkunotkun með staðlaðri hleðslu, hefðbundinn hamur	0.93 kWh/lotu	
Orkunotkun með staðlaðri hleðslu, viftudrifinn hamur	0.69 kWh/lotu	
Fjöldi holrýma	1	
Hitagjafi	Rafmagn	
Hljóðstyrkur	72 l	
Tegund ofns	Innbyggður ofn	
Massi	COB402V	29.8 kg
	EOK5B0B1	29.1 kg
	EOK5B0V1	29.2 kg

IEC/EN 60350-1 - Rafmagnseldunartæki til heimilisnota - 1. hluti: Svið, ofnar, gufuofnar og grill - Tegundir afkastamælinga.

13.2 Vöruupplýsingar fyrir orkunotkun og hámarkstíma til að ná viðeigandi lágorku-ham

Rafmagnsnotkun í biðham	0.8 W
Hámarkstími sem þarf til að búnaðurinn nái sjálfkrafa viðeigandi lágorku-ham	20 mín

13.3 Ráð um orkusparnað

Eftirfarandi ráð hér að neðan munu hjálpa þér að við orkusparnað þegar þú notar heimilistækið þitt.

Gættu þess að hurðin á heimilistækinu sé almennilega lokað þegar tækið er í gangi. Ekki opna hurðina á heimilistækinu of oft á meðan eldað er. Haltu kanti hurðarinnar

hreinum og gættu þess að hann sé vel festur á sínum stað.

Notaðu eldhúsáhöld úr málm og dökk, mött ílát til að bæta orkusparnað.

Forhitaðu ekki heimilistækið fyrir eldun nema mælt sé sérstaklega með því.

Hafðu eins stutt hlé í bakstrinum og mögulegt er þegar þú undirbýrð nokkra rétti í einu.

Eldun með viftu

Þegar mögulegt er skaltu nota eldunaraðgerðir með viftu til að spara orku.

Hitaeftirstöðvar

Þegar eldun tekur lengri tíma en 30 mínútur skaltu lækka hita heimilistækisins eins mikið

og hægt er 3 - 10 mínútum áður en eldun er lokið. Afgangshiti inn í heimilistækinu mun halda áfram að elda matinn.

Notaðu afgangshitann til að halda matnum heitum eða til að hita upp aðra rétti.

Halda mat heitum

Veldu lægstu mögulegu hitastillinguna til að nota afgangshita og halda matnum heitum.

Bökun með rökum blæstri

Aðgerð hönnuð til að spara orku á meðan eldað er.

Þegar þú notar þessa aðgerð er slökkt á ljósinu.

14. UMHVERFISMÁL

Endurvinna þarf öll efni merkt tákninu . Setjið umbúðirnar í viðeigandi sorpílát til endurvinnslu. Leggið ykkar að mörkum til verndar umhverfinu og heilsu manna og dýra og endurvinnið rusl sem fylgir raftækjum og rafrænum búnaði. Hendið ekki

heimilistækjum sem merkt eru með tákninu  í venjulegt heimilisrusl. Farið með vöruna í næstu endurvinnslustöð eða hafið samband við sveitarfélagið.





